

VIVAX
METROTECH

vLoc3-Pro 10W Kit

Advanced Utility Locator




The **vLoc3-Pro** utility locator introduces new innovative tools for locating buried utilities assuring damage prevention while gathering information for analysis.

With two sets of screened 3D antennas signal distortion is easily detected and displayed on the bright full color display. Along with classic locate screens the vLoc3 series locators offer new locate perspective screens of Vector Locate for fully automatic non-walk over locating




vLoc3 Pro Utility Locator Kit


Classic and advanced visualisation screens

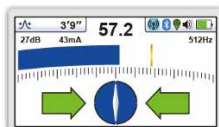

Classic Screen - as in previous vLoc locators, with the addition of three color-coded distortion levels

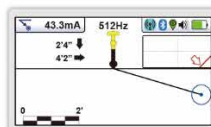


Vector Locate - shows orientation, line position, and distance relative to the locator in 3D

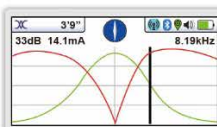

Transverse Plot Screen - is used to display the peak and null to compare distortion shape



Sonde Screen - arrow guidance showing direction to the sonde and depth of cover

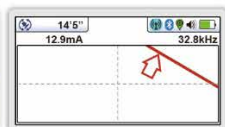

Plan View Screen - displays the theoretical line in 2D from above ground in omnidirectional mode

Additional optional items on offer:



Marker Locator Adapter



Trace rod with sonde



High-accuracy GNSS

\$9,790 INCL. GST

Terms & Conditions

Promotion ends 30 June 2022 Quoted model is vLoc3 Pro 10-Watt Kit, incl. carry bags and 5" Induction Clamp. Li-Ion and Tx-L options are available. Limited stock. Standard Terms & Condition apply crkennedy.com.au/terms/

Contact your local C.R. Kennedy representative today! VIC 03 9823 1533 | NSW 02 9552 8300
QLD 07 3862 6210 | SA 08 8410 0533 | WA 08 9489 8500 | TAS 03 9823 1505

sales@crkennedy.com.au | survey.crkennedy.com.au

